



WARRANTY

This Care and Maintenance information will help keep your Regency wardrobes looking beautiful and working for many years, while maintaining warranty coverage. Regular inspections and minor maintenance are the best ways to keep your product in good condition. Failure to adhere to the care and maintenance advice will void warranty.

DOORS

Timber doors, painted or stained, and infill panels in aluminium framed doors should be wiped over with a soft damp cloth. Occasional use of a mild detergent and water solution may be necessary to remove stubborn marks.

Doors with a pattern and/or a texture on the face of the door should be wiped down with a soft damp cloth with a minimum amount of mild detergent. It may be necessary to use a soft-bristle brush with a minimum amount of water and detergent to remove ingrained marks.

Do not use solvents or harsh detergents, bleaches, scourers, rough, gritty, highly acidic, alkaline or abrasive cleaners.

Check that doors are sliding freely, ensure regular vacuuming or cleaning of the bottom track to remove dust, dirt and debris.

If necessary, adjust the rollers to raise the sliding door, to provide clearance between the door and the sill/track. Replacement rollers are available from your nearest sales office.

CLEANING POWDER COATED AND ANODISED ALUMINIUM FRAMES

Wardrobe frames should be wiped over with a soft damp cloth. Occasional use of a mild detergent and water solution may be necessary to shift stubborn dirt. **Under no circumstances** use solvents or harsh detergents, bleaches, scourers or any other abrasive cleaner. Keep wardrobe tracks free from dirt with a brush or vacuum cleaner.

WARDROBE INTERNALS INCLUDING MELAMINE JOINERY

Wipe down using a damp soft cloth and warm soapy water, followed by drying using a soft or microfibre cloth so as not to leave any residue on the door or panel.

For more stubborn stains, use a good quality streak-free glass cleaner as per the manufacturer's recommendation. You may also use methylated spirits on a soft cloth, using a circular cleaning motion being careful not to rub too hard. Wipe down using a damp soft cloth and warm, soapy water, followed by drying using a soft or microfibre cloth so as not to leave any residue on the panel.

HARDWARE

To clean hardware such as hinges and handles, use mild detergent and warm water. Wash hardware, then rinse with clean, warm water. Do not use any substance with abrasives.





Thank you for choosing Regency.

We hope you're loving your product. Scan the QR code to leave a review on productreview.com.au.

Whilst the utmost care is taken to ensure the accuracy of the information contained herein, it is provided in the understanding that the company shall under no circumstances be liable for any injuries, expenses or other losses which may in any way be attributable to the use or adoption of such data. Regency reserves the right to alter or amend without prior notice. REGNAT0010/0324